



Instruction for Use

ChillMix Electrical Shaker

EN / English

Produkt / Product	ChillMix Electrical Shaker
Modell / Model	VOLTRX® ChillMix
Füllmenge / Fill volume	250–550 ml
Input	5V DC, 1A, 5W
Akku / Battery	Li-ion, 3.7V, 1000 mAh

Important: The electric base must never be placed in the dishwasher or immersed in water. Only the cup and lid are dishwasher-safe.

Hersteller / Manufacturer:

Dongguan Hanhe Technology Co., Ltd.
Room 205, Building 1, No. 75 Longteng Road,
Shipai Town,
Dongguan City, Guangdong Province, China

EU-Importeur / EU importer:

ECO Brotbox GmbH
Zimmerstr. 26/27
D-10969 Berlin
Deutschland / Germany
info@ecobrotbox.de

1. Included in the box

The package contains:

- Electrical shaker / stainless-steel cup
- Removable electric base
- Charging cable

Before first use, check that all parts are present and undamaged.

2. Intended use

The ChillMix is an electrical shaker designed for mixing liquids with protein powder or similar drink powders.

The product is intended for cold or lukewarm drinks. It is not intended for heating, cooking, freezing, or long-term storage of dairy products or baby food.

3. Before first use

- Remove all packaging materials.
- Clean the cup and lid before first use.

- Fully charge the base.
- Check that the cup and base are correctly connected.

The base is correctly installed when the cup and base are firmly connected.

4. Installing and removing the base

Installing the base

- Position the base straight onto the bottom of the cup.
- Make sure the notch is correctly aligned.
- Gently press the base into place until it sits firmly.

Removing the base

- Hold the cup securely.
- Gently pull the base downward to remove it.
- Always remove the base before cleaning or before placing parts in the dishwasher.

The magnets are used to hold the base in place. The four contact pins transfer power to the motor.

5. How to use

Preparing a drink

- Add liquid. Recommended fill volume: 250–550 ml / 9–18 oz.
- Add protein powder or another suitable drink powder.
- Close the lid securely.
- Press the button to start mixing.
- After mixing, drink directly from the shaker.

Button functions

- Press once: 30-second mixing mode
- Double click: 3-minute mixing mode
- Press once during mixing: Stop mixing
- Press and hold for 5 seconds: Display battery level

6. Battery display and charging

The battery display is located on the base.

During charging, the LED indicator flashes according to the current battery level. After the battery is fully charged, all indicator lights turn off.

If the LED indicators turn off one after another at the end of mixing and the last LED flashes quickly three times, the battery needs to be charged.

Battery life depends on usage frequency. The indication “one charge for approximately one month” is based on three uses per week in 30-second mixing mode. Battery performance may decrease over time.

Only charge the product with a suitable 5V USB power source.

7. NFC function

The ChillMix contains an NFC function in the top logo label. It is used to open a customer service or warranty page.

To use this function, hold an NFC-enabled smartphone near the logo label.

8. Cleaning

Dishwasher cleaning

Important: The electric base must never be placed in the dishwasher.

Only the cup and lid may be placed in the dishwasher.

- Remove the base from the cup.
- Place the cup and lid upside down in the dishwasher.
- Do not place the electric base in the dishwasher.

Manual cleaning

- Add warm water and a small amount of dish soap to the cup.
- Close the lid.
- Press the button to start the cleaning cycle.
- Pour out the water and rinse thoroughly.
- Clean the lid separately.

Do not fully immerse the base in water or any other liquid and do not soak it for a longer period of time.

9. Important safety instructions

Heat and pressure

Never pour liquids hotter than 160°F / approx. 71°C into the bottle. Excessive temperature can cause pressure to build up during operation and may damage the seal, causing liquid to leak or spray from the top.

Do not heat the shaker in a microwave, sterilizer, oven, or any other high-temperature environment.

Do not freeze this product.

Carbonated drinks, dry ice, acids and alkalis

Do not add dry ice, carbonated beverages, or other liquids that may generate high pressure.

Do not add strong acids or alkalis. These may damage or corrode the inside of the container.

Food storage

Do not store dairy products or baby food in the bottle for a long time.

Base and electronics

Do not immerse the electric base fully in water or any other liquid.

Do not use the product if the base, contact pins, charging cable, or housing are damaged.

Make sure the contact pins are clean and dry before installing or charging the base.

Keep fingers, cutlery, and other objects away from moving parts. Do not operate the product when the lid is open.

10. Troubleshooting

The mixer does not start and one LED flashes three times

Possible cause: The battery is empty. Solution: Charge the base.

Mixing power is weak or the mixer stops suddenly. All LEDs flash three times.

Possible causes: Low battery, too much protein powder, base not installed correctly.

Solution: Charge the battery, reduce the amount of powder or liquid, and reinstall the base correctly.

The base and bottle cannot be assembled correctly

Possible causes: Foreign matter in the notch, incorrect notch position.

Solution: Check the notch and contact area, remove any foreign matter, and align the base correctly.

11. Disposal

This product contains electronic components and an integrated rechargeable battery. It must not be disposed of with normal household waste.

Dispose of the product according to local regulations for electrical equipment and batteries. Use suitable collection points or return options.

12. Customer service

For questions about the product, use, warranty, or complaints, please contact:

ECO Brotbox GmbH, Zimmerstr. 26/27, D-10969 Berlin, Germany, info@ecobrotbox.de

Version 1.1 – August 2026